

ATOM BROSE QUICK GUIDE 2020

UPGRADE KITS



Bluetooth + App Premium

🍏 App Store:
BH Bikes premium

▶ Google Play:
BH Bikes premium



GPS Tracker

🍏 App Store:
BH Bikes GPS Locator

▶ Google Play:
BH Bikes premium



Winter Battery Cover


DISPLAY INFO



ON /OFF



LEVEL

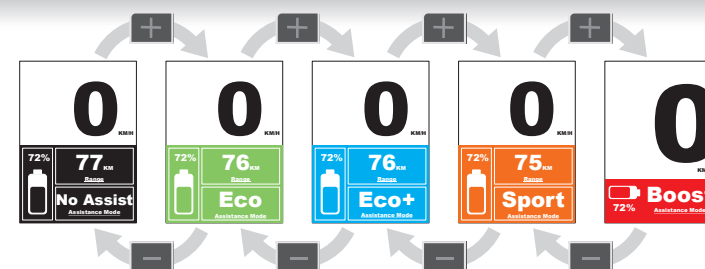

LIGHTS





3 sec



SETTINGS



3 sec

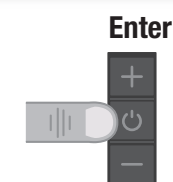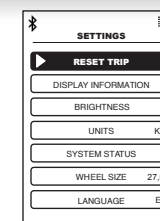


Enter




3 sec

Exit


Reset Trip

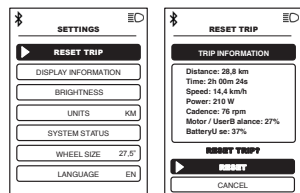


Display Info

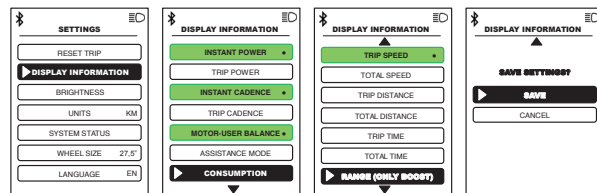


Brightness

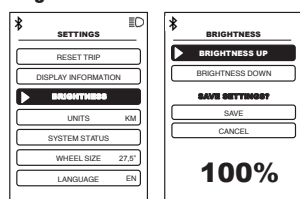

Units

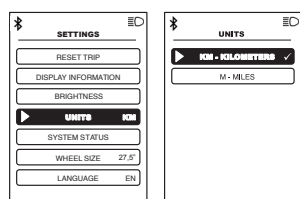


System Status - Battery Status

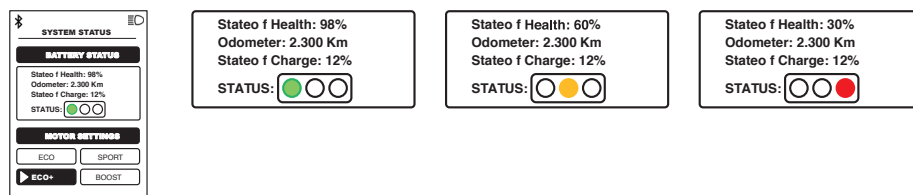


System Status - Motor Settings


Motor Settings Assistance

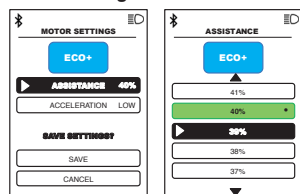


Motor Settings Acceleration

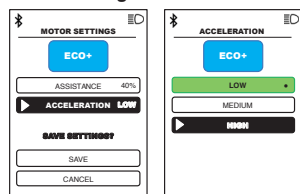


Wheel Size

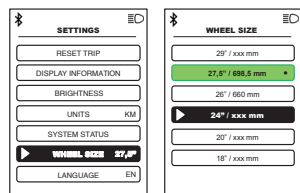

Language

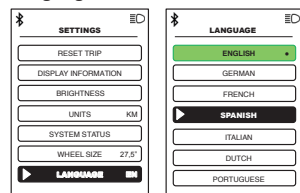



Errors

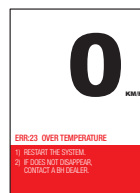

THROTTLE



BATTERY

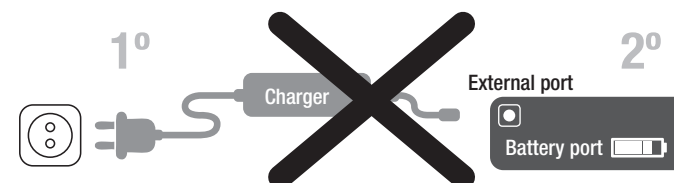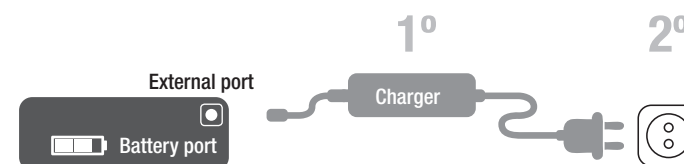

Only use the charger provided with the battery. Do not place any object on the charger. Charging the BH battery at 70-80% is mandatory if not used or stored for a long time period. Additionally, control the level of the battery charger every three months and always keep it above 20% charge. If the battery is in deep sleep mode, in order to wake it up, please charge the battery to 100%