

ATOMX QUICK GUIDE 2018

UPGRADE KITS



Bluetooth + App Premium

App Store:
BH Bikes premium

Google Play:
BH Bikes premium



GPS Tracker



Winter Battery Cover


DISPLAY INFO




ON / OFF




CHANGE INFO

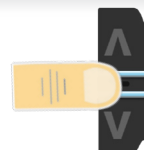


3 sec

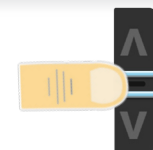

LEVEL

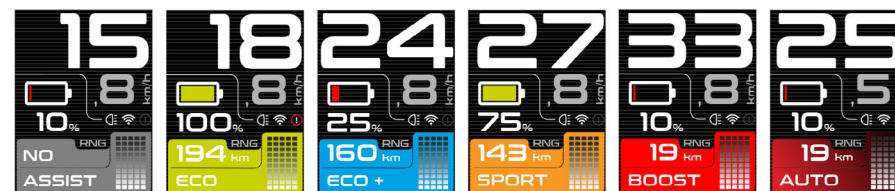


LIGHTS

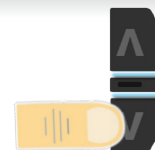

3 sec




THROTTLE

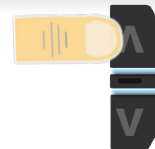

3 sec

Exit


SETTINGS

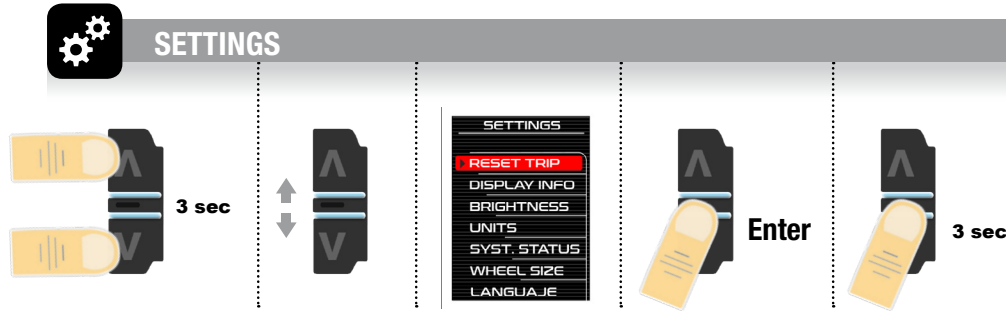

Reset Trip



Display Info

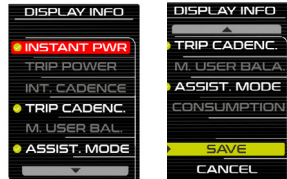


Starting Profile




Brightness



Units

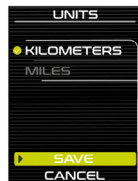

■ System Status - Battery Status

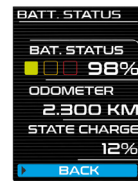

System Status - Motor Settings

Motor Settings Assistance



Wheel Size



Language



Bluetooth




Vibration notifications



Errors



BATTERY

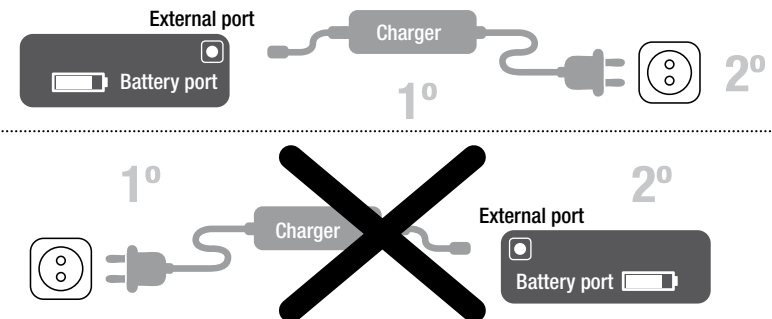

Only use the charger provided with the battery. Do not place any object on the charger.

Charging the BH EMOTION battery at 70-80% is mandatory if not used or stored for a long time period. Additionally, control the level of the battery charger every 3 months and always keep it above 20% charge.

If the battery is in deep sleep mode, in order to wake it up, please charge the battery to 100%.