



ATOMX QUICK GUIDE 2020

Only use the charger provided with the battery. Do not place any object on the charger.
Charging the BH battery at 70-80% is mandatory if not used or stored for a long time period. Additionally, control the level of the battery charger every 3 months and always keep it above 20% charge.
If the battery is in deep sleep mode, in order to wake it up, please charge the battery to 100% capacity.

UPGRADE KITS



DISPLAY INFO



ON / OFF





CHANGE INFO



3 sec



LEVEL

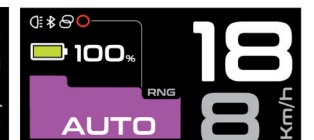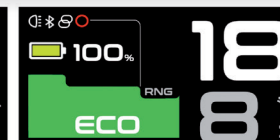

LIGHTS




3 sec




THROTTLE






3 sec

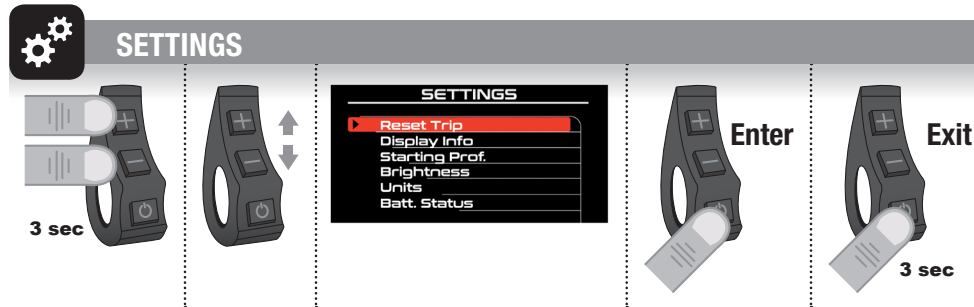



Reset Trip

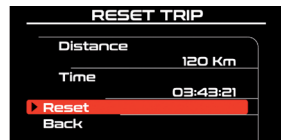


Display Info

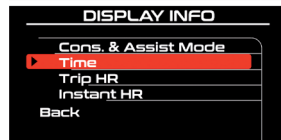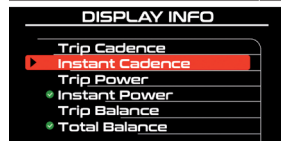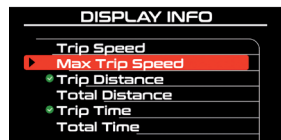


Starting Profile - Smart Key

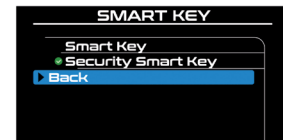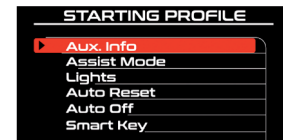


Brightness

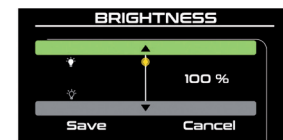




Units

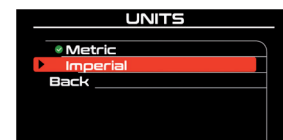


Battery Status

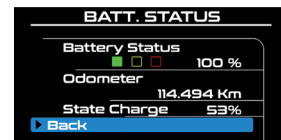


Motor Settings

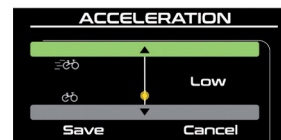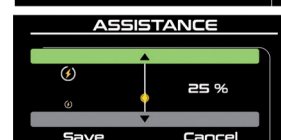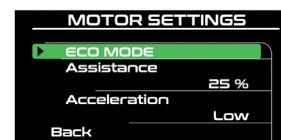

Wheel Size

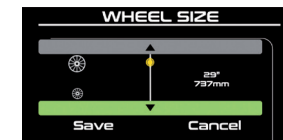


Connectivity - Bluetooth

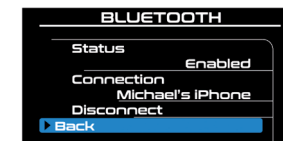


Language





Connectivity - Ant+

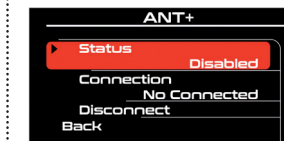

Connectivity

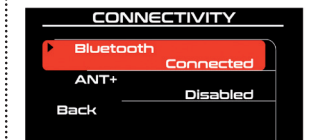

Vibration notifications

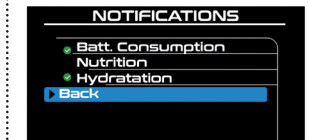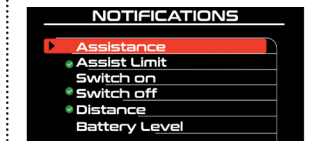

Errors

