

EVO QUICK GUIDE 2017

UPGRADE KITS



Bluetooth + App Premium

App Store:
BH Bikes premium

Google Play:
BH Bikes premium




GPS Tracker




Winter Battery Cover

DISPLAY INFO


Power

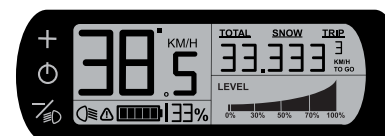


ON /OFF

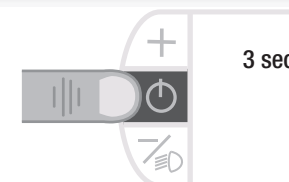

LEVEL

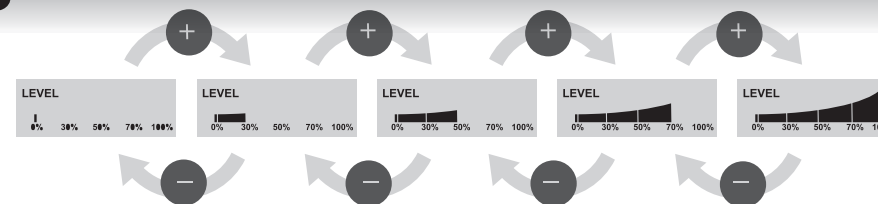


LIGHTS

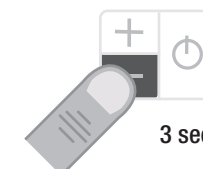


i

INFORMATION

 Change information



Reset trip information

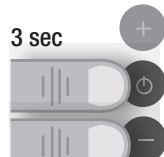

SETTINGS

1°
Enter

2°

- 1 Wheel size
- 2 Km / Miles
- 3 AWD motor
- 4 Battery
- 5 Controller temperature
- 6 Torque sensor
- 7 Battery state of health
- 8 Controller firmware

Only with central display

3°

- 1
- 2 Km ↔ Miles
- 3 AWD Mode
OFF REAR
ALL ECO FRONT
- 4 Battery type
(+) Ah → (-) Ah
- 6 Torque sensor ✓
0,5 V → 1,5 V

4°
Exit




THROTTLE



On



Off

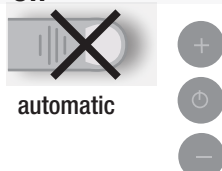

BATTERY

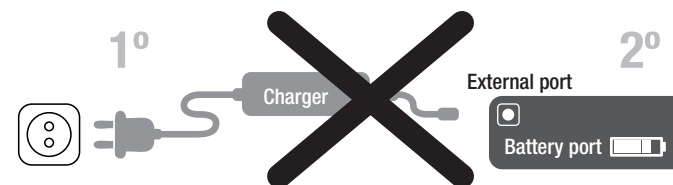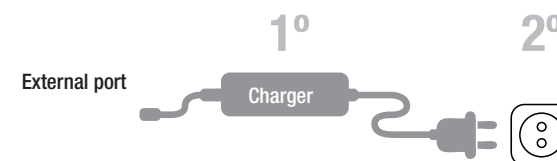

Only use the charger provided with the battery. Do not place any object on the charger. Charging the BH EMOTION battery at 70-80% is mandatory if not used or stored for a long time period. Additionally, control the level of the battery charger every 3 months and always keep it above 20% charge. If the battery is in deep sleep mode, in order to wake it up, please charge the battery to 100% capacity.